





PEDESTRIAN GATE

INSTALLATION INSTRUCTION


STRUCTURE

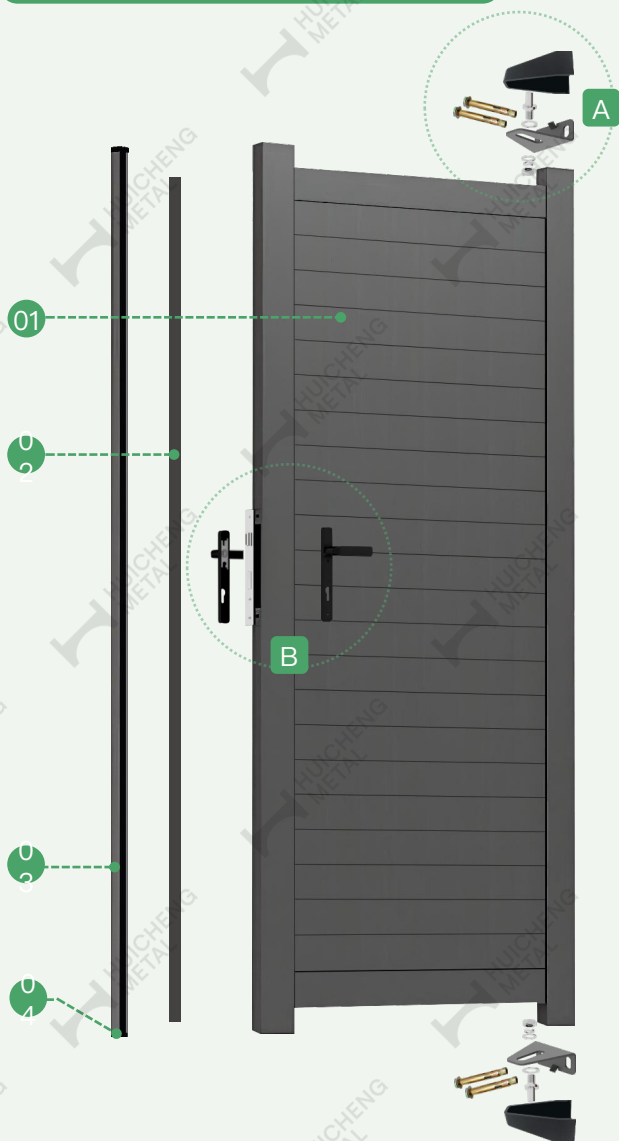


NO.	DESCRIPTION	QTY
01	Ready Made Gate	1
02	Lock Keep Cover Strip	1
03	Lock Keep Channel	1
04	Lock Keep Channel End Caps	2
05	Hinge Cover	2
06	Hinge Bracket	2
07	M12 Hinge Nut	2
08	Spring Washer	2
09	M12 Washer	4
10	Hinge Spigot	2
11	Anchor Bolts	4
12	Euro Lock Cylinder	1
13	Handle Outside	1
14	Lock Spindle Bar	1
15	Lock Mechanism	1
16	Lock Mechanism Screws	2
17	Barrel Locking Screw	1
18	Handle Screws	2
19	Lock Plate Screws	3
20	Lock Plate T-clips	3
21	Lock Plate	1
22	Handle Inside	1

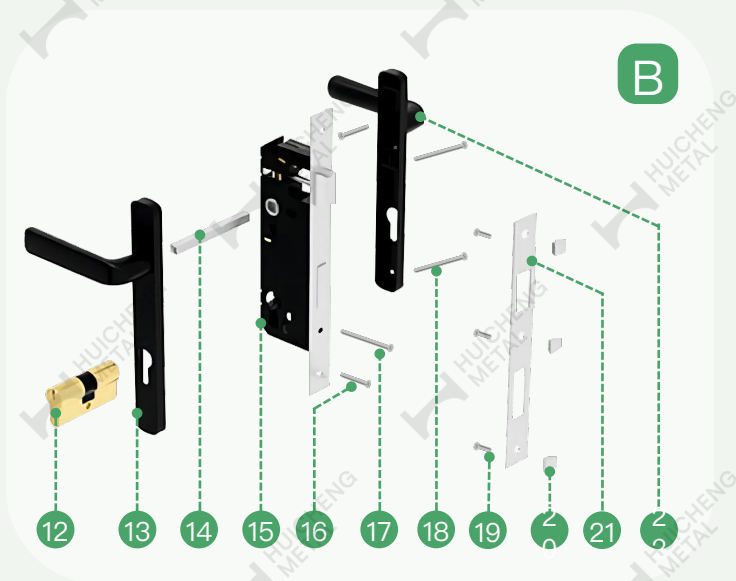


SPECIFICATION

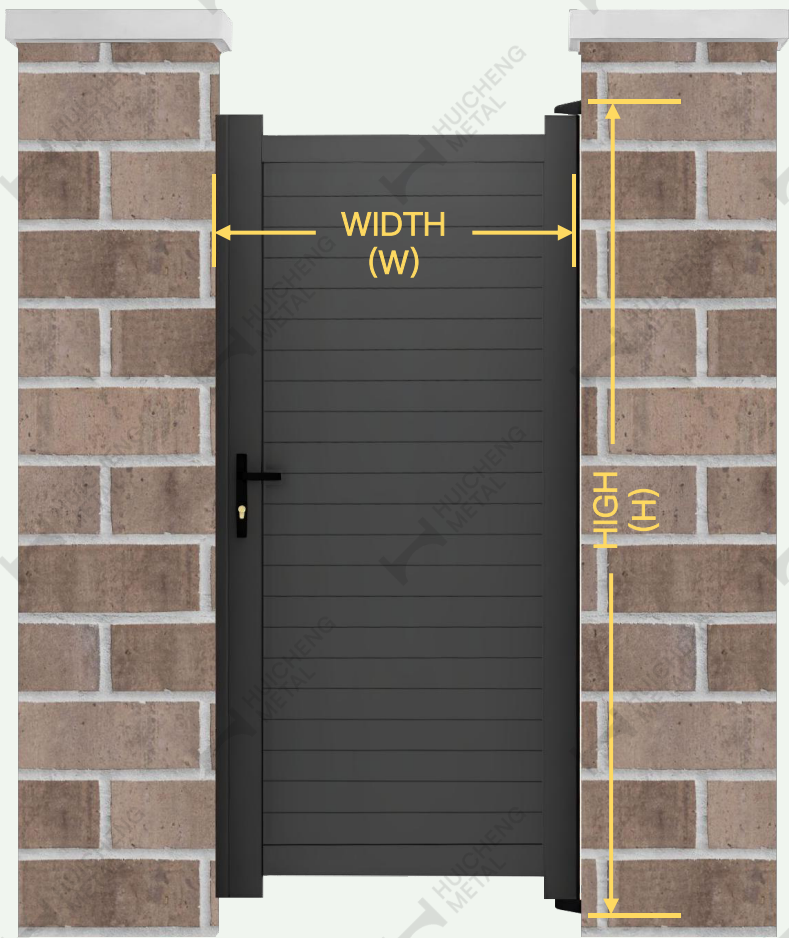

HORIZONTAL

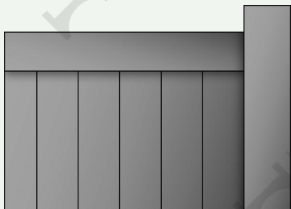

VERTICAL

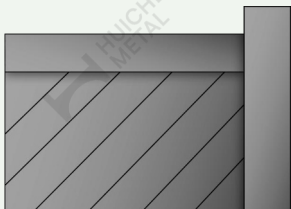

DIAGONAL

H \ W	800	850	900	950	1000	1100	1200	1300	1400	1500
1600	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
1800	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
2000	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
2200	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
NOTE	1) Unti: MM. 2) Other sizes can be customized.									



Black




Grey



White



Brown

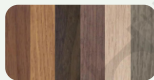

Wood Grain



Customized

INSTALLATION

1 Check width of opening.

- Gate width +30mm.
- Choose LH RH opening.



2 Mark the two holes.



3 Drill two holes.

- 10mm drill bit.
- Min 50mm depth.



4 Assemble spigot. Do not over-tighten.




5 Fix to wall.

- M10 * 45mm bolts.



6 Place gate on lower spigot.

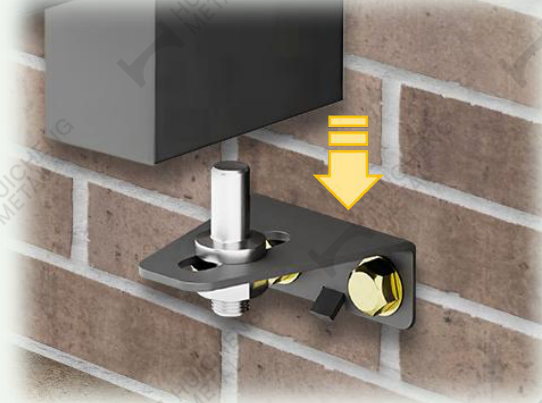

7 Assemble upper spigot.



- Opposite to lower bracket.

8 Mark the two holes.



- Hold gate square.

9 Drill two holes.



- 10mm drill bit.
- Min 50mm depth.

10 Fix to wall.



- M10 * 45mm bolts

11 Lock assembly.




12 Set latch direction.




- Set flat face towards inside of gate direction.
- To change direction of latch lift lever, depress latch and rotate 180° inside of gate direction.
- Once set ensure lever falls back to home position.

13 Handle assembly.

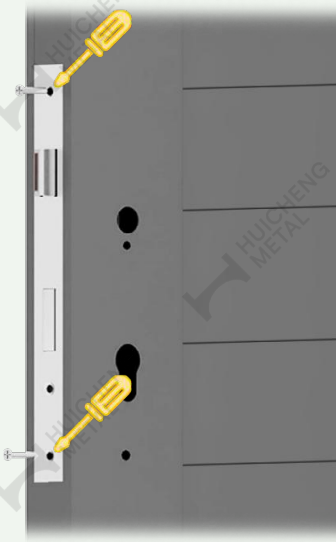

- M4 * 25mm.
- 2 Places.

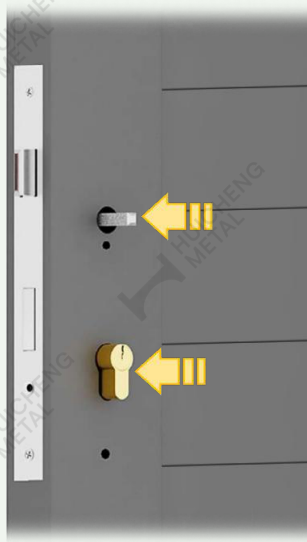


- Insert lock.
- Insert spindle.




- M4 * 45mm.
- 1 Place.


- 14 Set LH / RH handle ensure fixing holes to inside of gate.
Install handle screws.

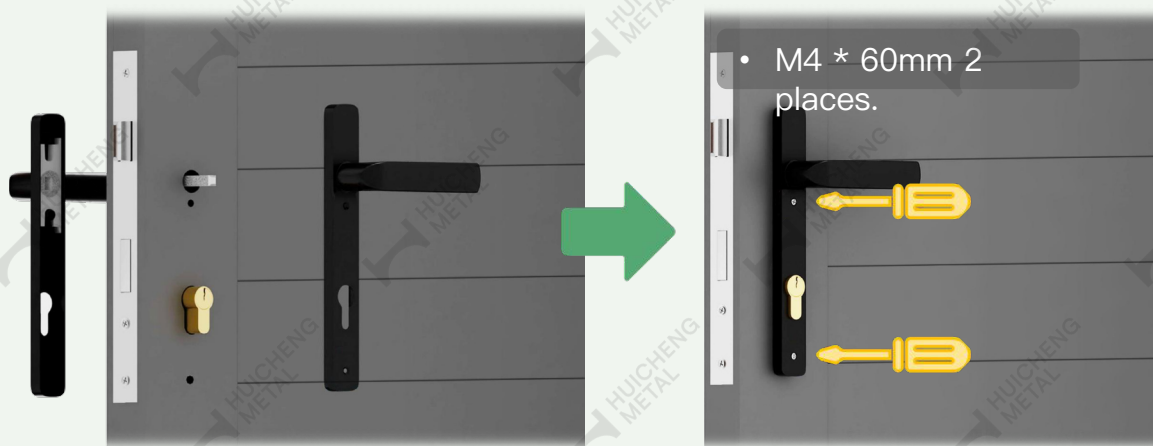


- 15 Put the lock keep cover strip on the lock keep channel.

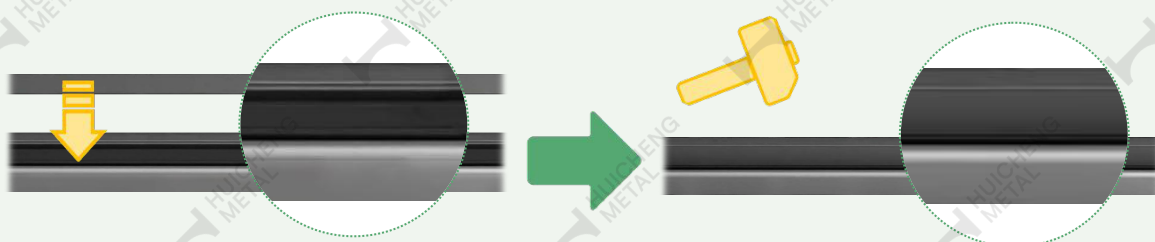



- 16 Mark the position of lock according the gate panel.

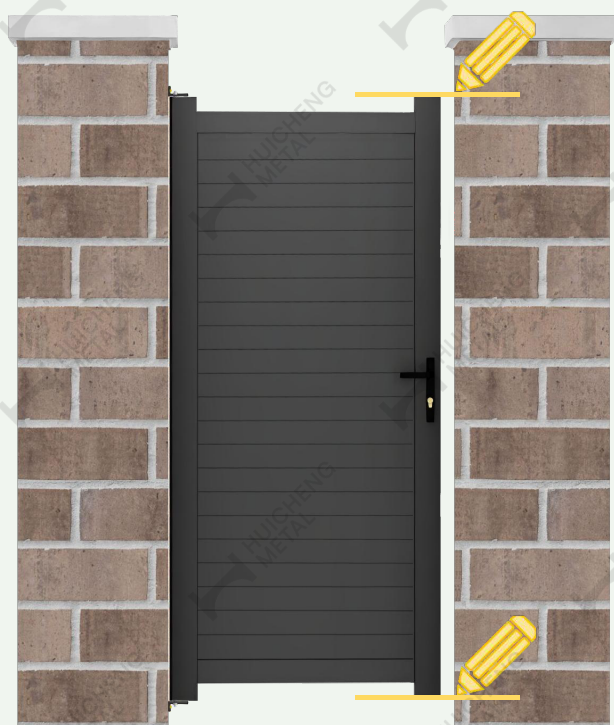


- 17 Install lower and upper caps.
Fix the channel to the wall.

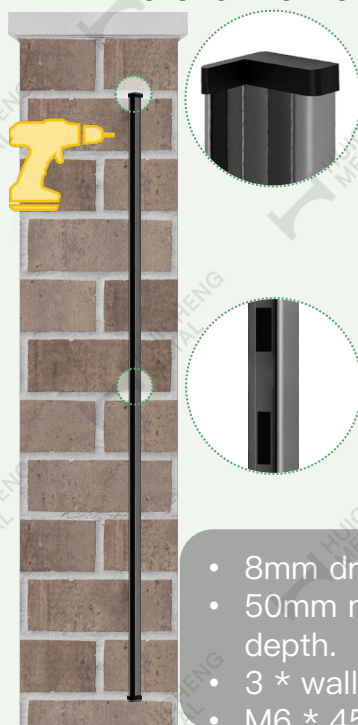

- 18 Align the two holes on lock plate with those on lock keep cover strip.
Tighten them with 3 screws.

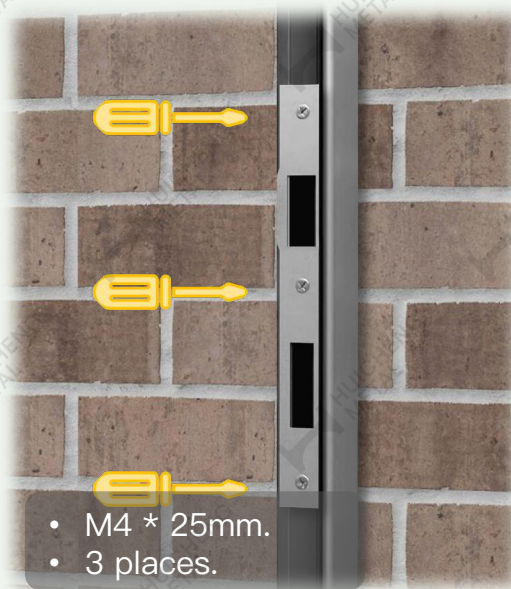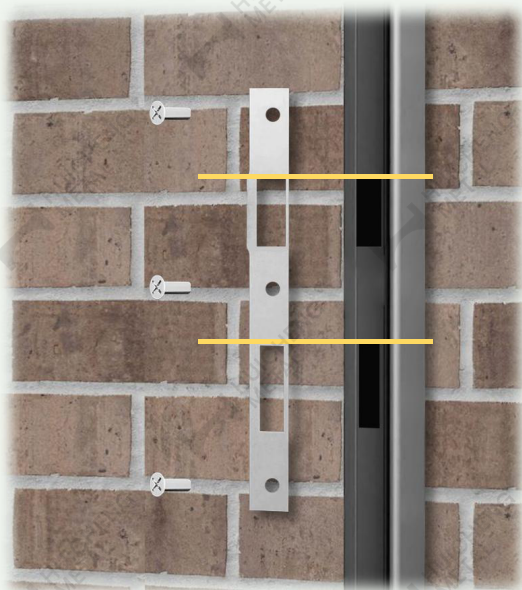

- 19 Final adjustment.

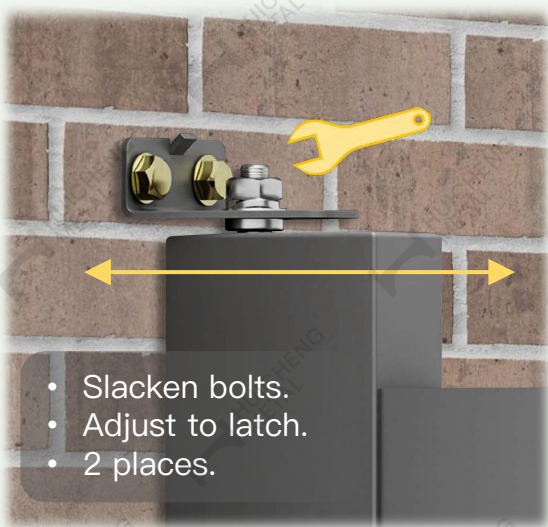

- 20 Fit hinge caps.



21 Installation complete.

